

6204 FULTON RD

## ■ Replacing ROM

1. Remove the Panel and the keyboard from the JX-3P's body.
2. Take out the ROM IC 52 (2764 or 23665) from the IC Socket on the Main Board.
3. Straighten the pin 26 of the new ROM (27128) and push it in the IC Socket.
4. Connect the Pin 26 (A13) of the CPU IC 44 (8031 or 8051) to the Pin 26 (A13) of the ROM IC 52 (27128) by using a jumper wire.
5. Turn the JX-3P on and make sure it works properly. Then replace the Panel and the keyboard onto the body.

